


The Voting Machine



Voting Machine
(AVM Machine)

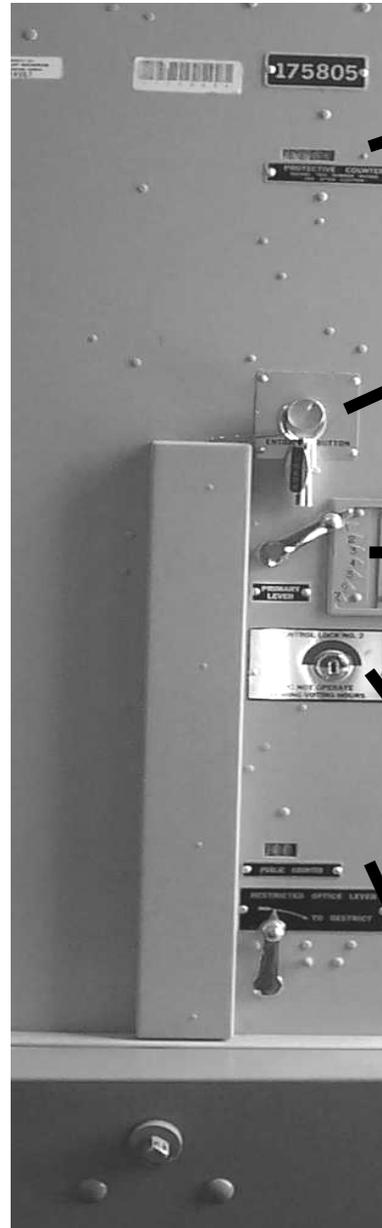


Right side of machine
(facing machine)



Protective Counter Number
(shows total number of voters ever cast on the machine)



Entrance Button
(must be pushed by the inspector prior to voter entering voting booth)

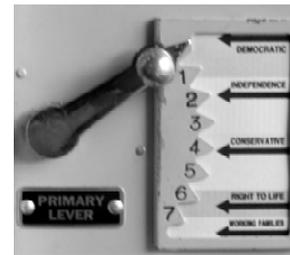

Primary Lever
(set in a primary election to voter's party)



2 Key
(Turns machine off and on)



Public Counter Number
(Shows number of voters who voted on the machine on an election day and is the number entered in the poll book next to the inspector's initials)




#3 key
(opens and closes front and back of machine)

Cranking Down a Handicap Accessible Machine

Use the handicap access machine to crank down the ballot face for a voter in a wheelchair or can not reach the levers. Be sure to drop the front panel.

1

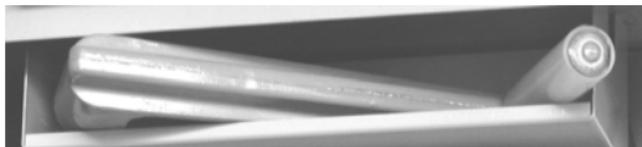

Handicap Crank

*(Found in upper left hand corner
in the back of the machine)*

2



Handicap Crank in the machine

3



Drop the front panel

4



***Machine
fully
cranked
down***